




TIGER PERFORMANCE PRODUCTS, INC.

Aviation & Marine • Safety • Communications

Respirator Mask Microphone Unplugging Procedure

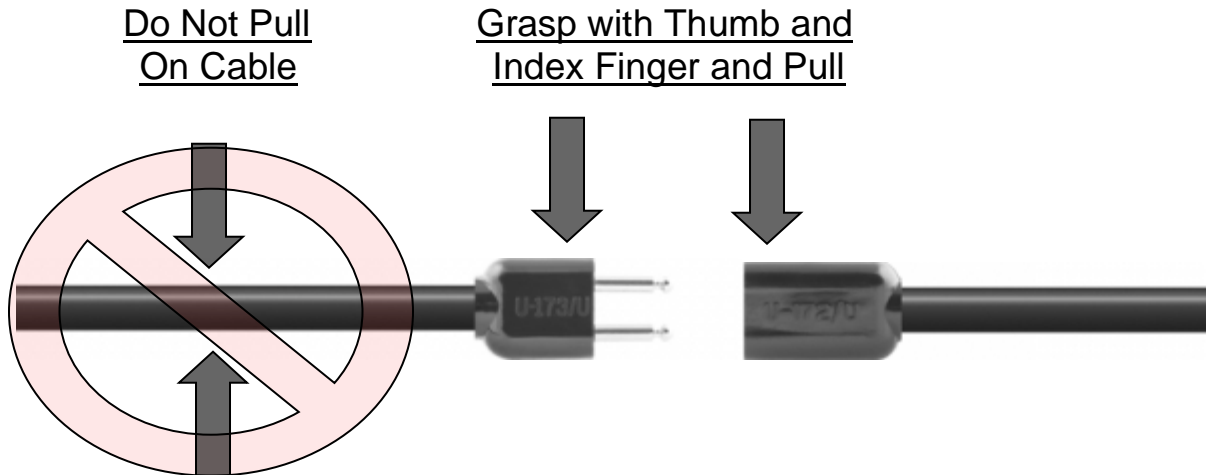

- When unplugging at the microphone cord at the helmet: Firmly Hold the shell of stationary helmet harness Nexus 2 contact connector with a thumb and index finger. Grasp the shell of the microphone cord Nexus 2 contact connector with your other thumb and index finger and pull to separate. Do not grab the microphone cord and pull.
- When unplugging the microphone cord at the mask: Grasp the 90 degree over molded 3.5mm male plug with a thumb and index finger and pull

Note: It is important to properly unplug the respirator microphone cord on the helmet end when the respirator mask is not being used. The Nexus 2 pin connectors are not designed for constant unplugging. Improper unplugging may result in damage to the microphone cord resulting in loss of microphone function. Unplug the microphone cord at the respirator when the microphone is not needed such as when removing the helmet but continuing to use the respirator mask. A mask microphone to boom microphone switch is highly recommended to help reduce wear and tear of the helmet microphone connectors. Damage to the microphone cord due to improper unplugging is not covered under the one-year warranty.